

IP- Web-

ip- Web- .



IP- , , , :

1. Internet Explorer.
2. (. Web- IP-).
3. Web- Web- Setup.

AXIS 211A Network Camera

Basic Configuration
Instructions
1. Users
2. TCP/IP
3. Date & Time
4. Video & Image
5. Focus
6. Audio

Video & Image

Audio

Live View Config

Event Configuration

System Options

About

Basic TCP/IP Settings

IP Address Configuration

Obtain IP address via DHCP View

Use the following IP address:

IP address: 192.168.0.224

Subnet mask: 255.0.0.0

Default router: 192.168.0.1

Services

Options for notification of IP address change

AXIS Internet Dynamic DNS Service

See also the [advanced TCP/IP settings](#)


IP-address IP- (. IP-).

Subnet mask ,
(Default router) :

a. IP-, Default router ().




b. IP-, IP- .

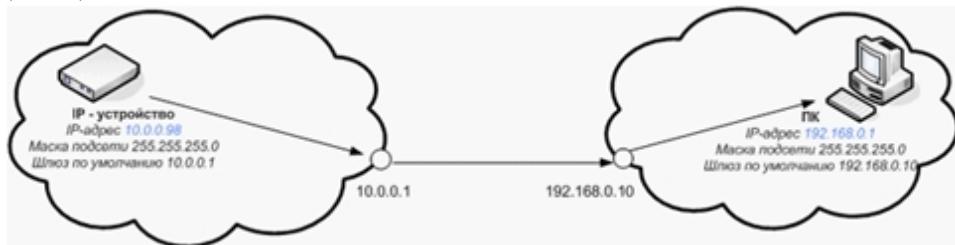

c. IP-, IP- .



, IP-

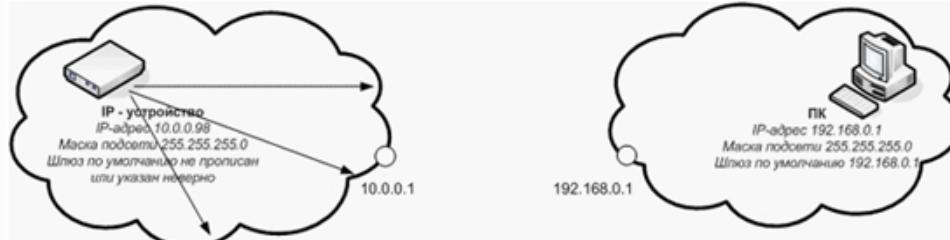

5. Setup System Options / Ports & Devices / RS232.

6. Port 1 Usage , , Pan Tilt Zoom. (Save).

The screenshot shows the configuration interface for an Axis 241Q Video Server. The left sidebar contains a tree view of configuration options:

- Basic Configuration
- Video & Image
- Live View Config
- PTZ Configuration
- Event Configuration
- System Options** (expanded)
 - Security
 - Date & Time
 - Network
 - Ports & Devices** (expanded)
 - I/O Ports
 - RS232** (selected)
 - RS485/PTZ
 - Maintenance
 - Support
 - Advanced
- About

The main content area is titled "COM Port RS232" and shows "Port Settings". A dropdown menu under "Port 1 Usage" is open, with the following options:

-
- Generic TCP/IP
- Generic HTTP
- Pan Tilt Zoom** (selected)
-

IP- .

IP- .