

FS-16(Exp)

FS-16(Exp) D-SUB-9 D-SUB-25. D-SUB-25/BNC. 16. D-SUB-9/RCA-8 D-SUB-9 FS16(Exp) (8). J2, J7, J8 . J1 Watchdog. J9 - 4/4 16/4 (. - 4/4 16/4).

