

TELEMETRY_EXT

TELEMETRY_EXT .

TELEMETRY_EXT , . . .

KEY_PRESSED		param0<>		.
		device<>	,	0 – <i>AXIS T8312</i> 1 – <i>AXIS T8313</i>
KEY_RELEASED		param0<>		0..21 <i>AXIS T8312</i> . <i>BOSCH KBD-Digital, BOSCH KBD-Universal Panasonic WV-CU950 .</i>
		device<>	,	0 – <i>AXIS T8312</i> 1 – <i>AXIS T8313</i>
MOVED		param0<>		JogDial -1.. 1; Shuttle -7..7 <i>Panasonic WV-CU950 JogDial -1.. 1; Shuttle -6..6</i>
		device<>	<i>AXIS T8313</i>	0 – 1 –

TELEMETRY_EXT :

-		
"DRAW_FIGURE" – <i>BOSCH KBD-Digital BOSCH KBD-Universal</i>	display<>	0x00 – , 0x01 –
	x1<>	X (0 127 , 0 121)
	y1<>	Y (0 239 , 0 31)
	x2<>	X (0 127 , 0 121)
	y2<>	Y (0 239 , 0 31)
	is_fill<>	0 – , 1 –
	is_set_pixels<>	0 – , 1 –
	figure<>	0 – , 1 –
"PRINT_TEXT" – <i>BOSCH KBD-Digital BOSCH KBD-Universal</i>	display<>	0x00 – , 0x01 –
	x<>	X (0 127 , 0 121)
	y<>	Y (0 239 , 0 31)

	charset<>	: 0 – 1 – 2 –
	style<>	: 0 – 1 –
	text<>	
"PRINT_TEXT" – <i>Panasonic WV-CU950</i>	y<>	0 – 1 –
	text<>	, 20
	flickering<>	, : d1 d2 d3 d4 d5 d6 d1 : 0 – 1 – 0.25 , 2 – 0.5 , 3 – 0.75 , 4 – 1 , 5 – 0.25 , 6 – 0.5 , 7 – 0.75 , 8 – 1 , d2: 1 – 1 4, 0 – d3: 1 – 5 8, 0 – d4: 1 – 9 12, 0 – d5: 1 – 13 16, 0 – d6: 1 – 17 20, 0 –
"CLEAR_DISPLAY" – <i>BOSCH KBD-Digital BOSCH KBD-Universal. Panasonic WV-CU950</i>	display<>	0x00 – , 0x01 –

"RELE_ON" – <i>AXIS T8312 Panasonic WV-CU950</i>	rele<>	, 12..16 <i>AXIS T8312</i> . <i>Panasonic WV-CU950</i> . , Panasonic WV-CU950
"RELE_OFF" – <i>AXIS T8312 Panasonic WV-CU950</i>	rele<>	, 12..16
"RESET" – <i>Panasonic WV-CU950</i>	type<>	0 – 1 – 100 2 – 200 3 – 500 4 – 1
"SET_ALARM" – <i>Panasonic WV-CU950</i>	audio_alarm<>	0 – 1 – 2 – 3 – 4 – 0.1 5 – 0.2 6 – 0.3 7 – 1 8 – 9 – A – B – 0.1 C – 0.2 D – 0.3 E – 1 F –