

SIP- GAI-Tronics HelpPoint

SIP- GAI-Tronics HelpPoint Web- :

1. IP- SIP- IP Settings.
2. SIP SIP Settings.

The screenshot shows a web browser window with the title 'Configuration'. The GAI-TRONICS logo is visible in the top left. The main content area is titled 'Configuration' and contains a list of settings under the heading 'Module: SIP settings'. The settings are numbered 1 through 6, corresponding to the list in the table below. The 'SIP settings' link in the left navigation menu is circled in red. The 'SIP 1 Parameters' section is also circled in red.

Page [1](#) - [General SIP Info](#),
[2](#) - [SIP 1 Info](#), [3](#) - [SIP 2 Info](#),
[4](#) - [SIP 3 Info](#), [5](#) - [SIP 4 Info](#)


Number	Parameter Name	Value
1	LOCALID	12345
2	PROXY	
3	REGISTRAR	
4	USERNAME	12345
5	PASSWORD	
6	ENDPOINT	ENABLED

SIP SIP Settings:

1	LOCALID	(, .)	SIP-
2	PROXY		- SIP-
3	REGISTRAR		
4	USERNAME	(, .)	SIP-. «LOCALID»

5	PASSWORD	(, .)	SIP-
6	ENDPOINT	ENABLED	SIP-

3. SIP- 1 Memories & Comfort Strings Dialing & Memories.

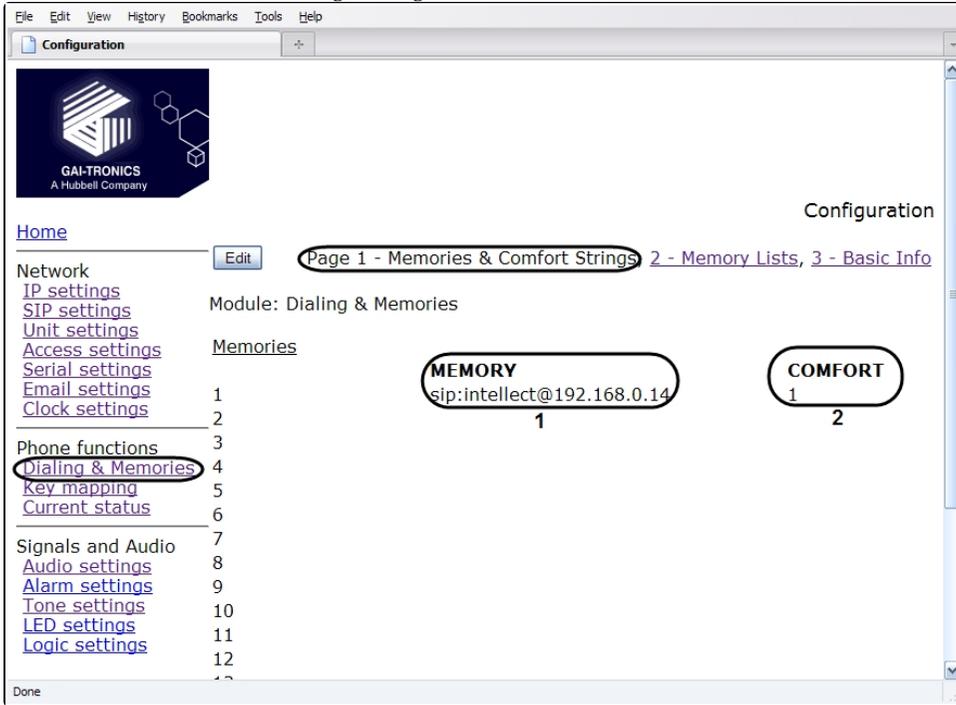

1 Memories & Comfort Strings Dialing & Memories:

1	MEMORY	sip:<>@<IP >	SIP URL : <> - . <IP > - IP-
2	COMFORT		SIP- (. 4)

4. **2 Memory Lists Dialing & Memories.**

Configuration

Page 1 - Memories & Comfort Strings > **2 - Memory Lists** > 3 - Basic Info

Module: Dialing & Memories

List	WAKEANDDIAL	LIST	Emergency list
0	OFF		
1	ON	1	
2	ON	2	
3	ON	3	
4	OFF	4	
5	OFF	5	
6	OFF	6	
7	OFF	7	
8	OFF	8	
9	OFF	9	
10	OFF	10	

2 Memory Lists Dialing & Memories:

1			
2	WAKEANDDIAL	ON	
3	LIST		COMFORT, SIP URL (. 3)

SIP- GAI-Tronics HelpPoint Web- .