


:

1. ;
2. , :
 - a. SIP-;
 - b. SIP-;
 - c. SIP-;
 - d. IP-.



:

1. .

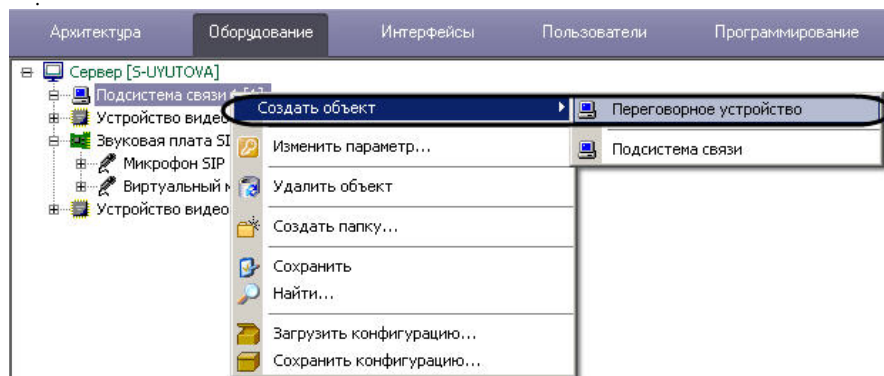

2. > .

3. , .

4. .

The screenshot shows a configuration window for SIP settings. At the top left, there is a text box containing the number '1' and a label 'Переговорное устройство 1'. Below this, there is a section for 'Подсистема связи' with an 'Отключить' checkbox and a dropdown menu currently showing 'Подсистема связи 1'. In the center, there are two columns of settings. The left column has 'Луч' with a dropdown showing 'Луч 1' (annotated with '1') and 'Микрофон' with a dropdown showing 'Микрофон SIP' (annotated with '3'). The right column has 'Камера' with a dropdown showing 'Камера переговорного устрой...' (annotated with '2') and 'Звукосниматель с коммутируемой выходной линией' with a dropdown showing 'Виртуальный микрофон SIP' (annotated with '4'). Below these, there is a checkbox 'Не принимать автоматически' (annotated with '5'). At the bottom, there is a dark bar with the number '6' and two buttons: 'Применить' and 'Отменить'.

5. , SIP- (1).
6. , (2).
7. , SIP- (3).
8. , - SIP- (. SIP-) (4).
9. , , (5).
10. (6).
11. 1-9 .