



1.

The screenshot shows a software configuration window with a light blue background. At the top left, there is a section with a dropdown menu set to '1' and the text 'Модуль обнаружения ТС'. Below it, there is a label 'Экран' followed by an unchecked checkbox 'Отключить' and a dropdown menu set to 'Экран 1'. To the right, there is a tabbed interface with two tabs: 'Основное' (selected) and 'Монитор'. The 'Основное' tab contains a checked checkbox 'Отображать', a section 'Координаты:' with input fields for 'X: 0', 'Y: 0', 'W: 100', and 'H: 50', and an unchecked checkbox 'Разрешить перемещение'. Below the 'Экран' section, there is a label 'Монитор для управления:' followed by a dropdown menu set to 'Монитор 1' (circled with a black line and labeled '1') and a button 'Настройки...'. Below this, there are two sections: 'Распознаватели номеров' and 'Внешние базы данных'. Each section has a 'Доступные:' list on the left and a 'Выбранные:' list on the right, with arrows between them. In the 'Распознаватели номеров' section, the 'Доступные:' list is empty and the 'Выбранные:' list contains 'Сервер распознавания номеров 1'. In the 'Внешние базы данных' section, the 'Доступные:' list contains 'Внешняя БД номеров 2' and the 'Выбранные:' list contains 'Внешняя БД номеров 1'. At the bottom, there are two buttons: 'Применить' (circled with a black line and labeled '2') and 'Отменить'.

2. (1) ,
3. (2).