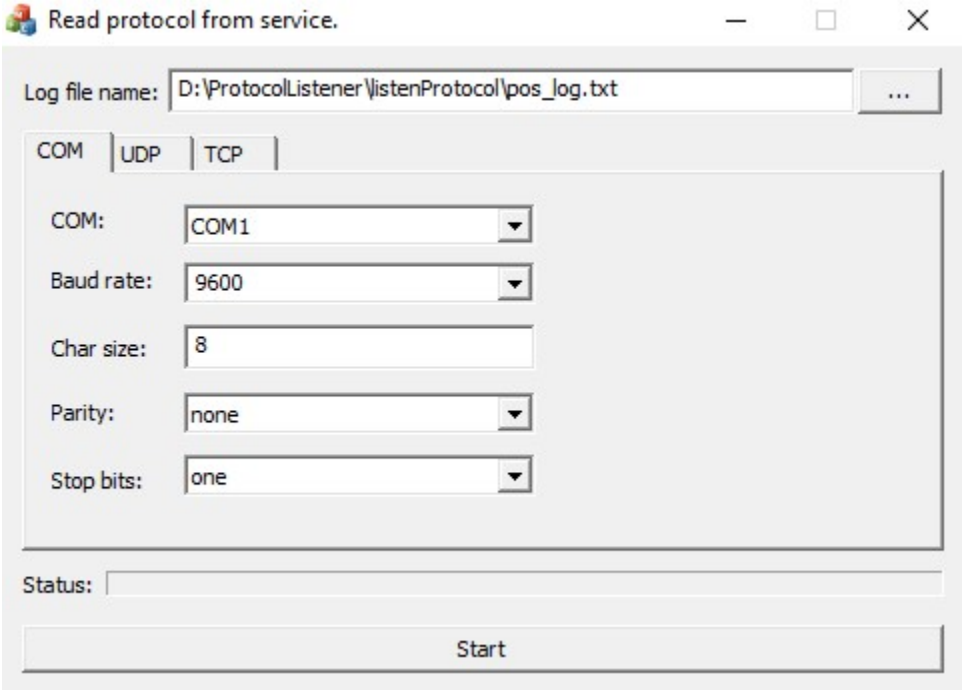



POS-

POS- :

1. (. POS-) (.).
2. POS- COM-, ITV POS .
3. .
4. POS- .
5. ProtocolLicenser.exe. **Read protocol from service.**

A screenshot of a Windows application window titled "Read protocol from service.". The window has a standard Windows interface with a title bar, minimize, maximize, and close buttons. The main area contains a "Log file name:" label followed by a text box containing "D:\ProtocolListener\listenProtocol\pos_log.txt" and a browse button "...". Below this are three tabs: "COM", "UDP", and "TCP", with "COM" selected. Under the "COM" tab, there are five labels with corresponding dropdown menus: "COM:" (set to "COM1"), "Baud rate:" (set to "9600"), "Char size:" (set to "8"), "Parity:" (set to "none"), and "Stop bits:" (set to "one"). At the bottom, there is a "Status:" label followed by an empty text box and a large "Start" button.

6. **Log file name** , . . . , . .
7. POS- COM-, COM.
8. POS- , TCP UDP .
9. **Start** .
10. , . . . , . .

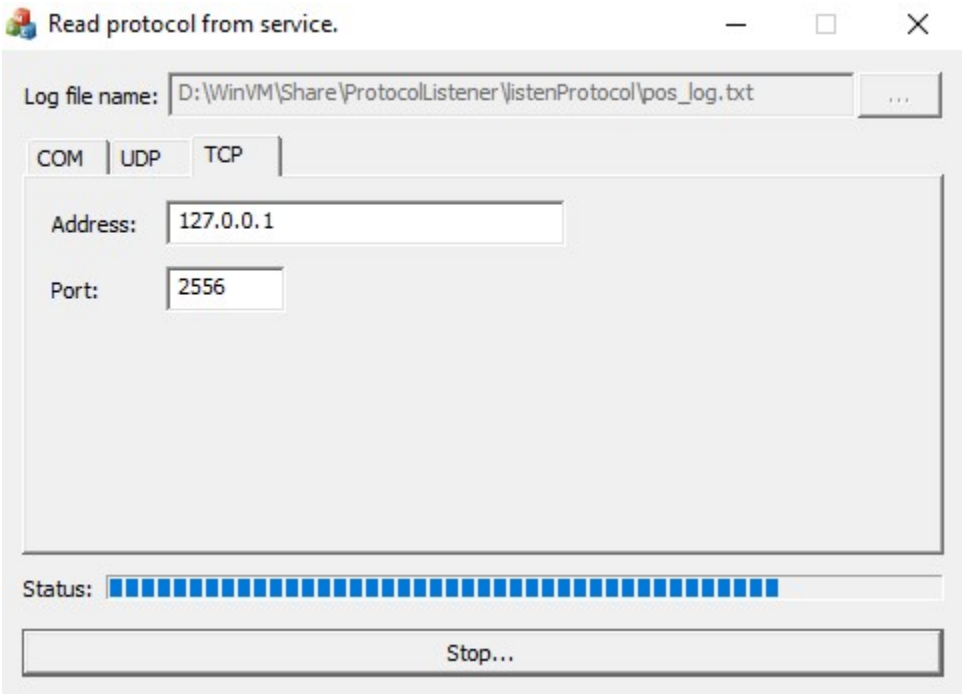A screenshot of the same "Read protocol from service." window, but now the "UDP" tab is selected. The "Log file name:" text box now contains "D:\WinVM\Share\ProtocolListener\listenProtocol\pos_log.txt". Under the "UDP" tab, there are two labels with corresponding text boxes: "Address:" (set to "127.0.0.1") and "Port:" (set to "2556"). The "Status:" label now shows a progress bar filled with blue blocks. At the bottom, there is a "Stop..." button.

Stop.

POS- LOG- ITV .



!

POS- , ITV . POS-.