

RISCO

RISCO ACFA- RISCO ProSYS Plus:

1. . (: 1234). , , * , , #.
2. (: 1111).
3. **System (1)** -> **Controls** -> **Communication** -> **CS Enable** -> .
4. **Communication (5)** -> **Method** -> **IP** -> **IP Config** -> **Obtain IP** -> **Static**.
5. **Panel Port** -> **1000**.
6. **Panel IP** -> IP.
7. **Mask** -> .
8. **Communication (5)** -> **Config. SW** -> **Security** -> **Access code** -> .

RISCO .