


IPMI

1. IP-, IPMI (. aa IPMI).
2. . "ADMIN".
3. Remote Control.

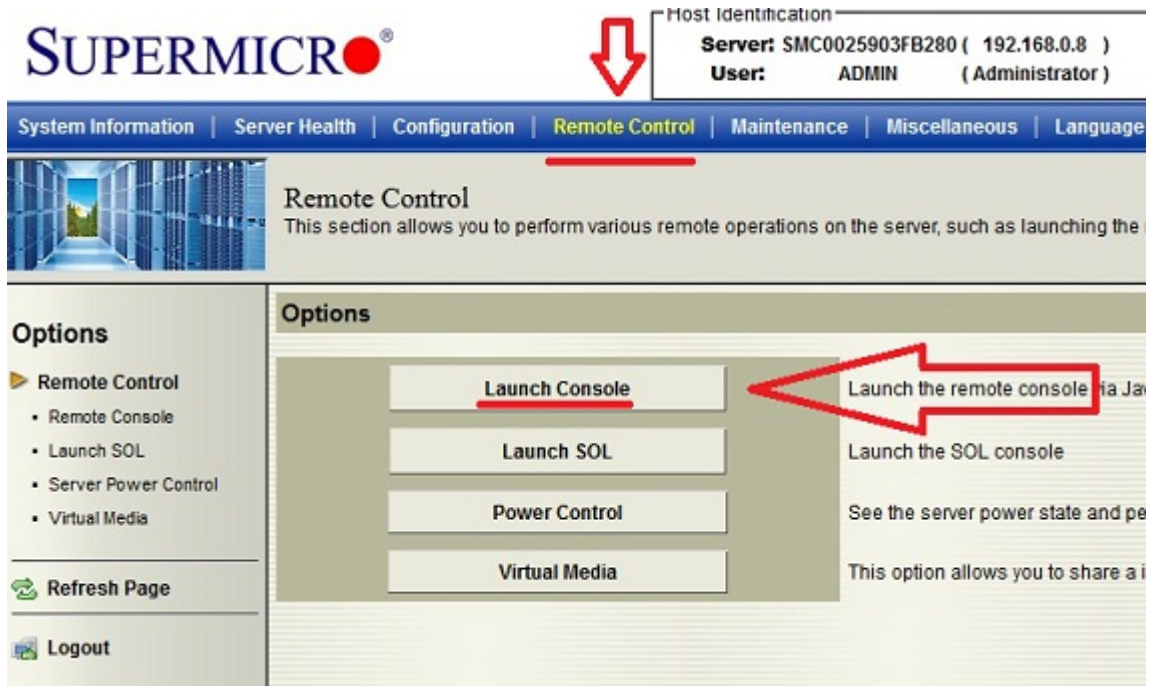

The screenshot displays the Supermicro IPMI web interface. At the top left is the Supermicro logo. To its right, a red arrow points down to the 'Host Identification' box, which contains the following information:

Host Identification
Server: SMC0025903FB280 (192.168.0.8)
User: ADMIN (Administrator)

Below this is a navigation bar with the following tabs: System Information | Server Health | Configuration | **Remote Control** | Maintenance | Miscellaneous | Language. The 'Remote Control' tab is highlighted with a red underline.

The main content area is titled 'Remote Control' and includes a sub-header: 'This section allows you to perform various remote operations on the server, such as launching the'. Below this is a section titled 'Options' containing four buttons: 'Launch Console', 'Launch SOL', 'Power Control', and 'Virtual Media'. A red arrow points to the 'Launch Console' button, which is also underlined. To the right of the button, the text 'Launch the remote console via J...' is visible. Below the buttons, the text 'Launch the SOL console' and 'See the server power state and pe' are visible. At the bottom of the 'Options' section, the text 'This option allows you to share a i' is visible.

On the left side of the interface, there is a sidebar with the following elements:

- Options**
- Remote Control**
- Remote Console
- Launch SOL
- Server Power Control
- Virtual Media
- Refresh Page**
- Logout**



, IPMI . IPMI (.).