

Cerberus PRO

Cerberus PRO CerberusPro Sensor.

CerberusPro Sensor 1 [1]

Show last events

Enable

Disable

Cerberus PRO :

Enable	
Disable	

Cerberus PRO:

Optical detector	Temperature detector	MCP	Module	Signaller	Flap	Input	Bulb	Power supply	Valve	/
										Not started/Unknown
										Active
										Link lost/Offline
										Normal
										Pre-alarm
										Alarm
										Abnormal/disabled
										Fault